


## Case dimensions - Actisense Gateway

To install your Actisense product, please use the full-size mounting hole dimension template and guidelines below...

### Guidelines

1. Find a secure area on a bulkhead of at least 50 x 220 mm, and using the "Mounting hole positions" template, mark-out the drill holes.
2. Drill appropriate sized holes for the mounting screws or bolts (M3 or M4 with a small head are ideal sizes).
3. Mount the base to the bulkhead lengthways, so the cable grommets will point out to the sides (this helps to maximise the water ingress protection).
4. If additional protection from water is required, apply a small amount of silicon / sicaflex sealant to the base's groove before screwing to the lid.
5. Do not over tighten the lid screws, otherwise the lid's sealing ability will be reduced, compromising the case's water ingress protection.

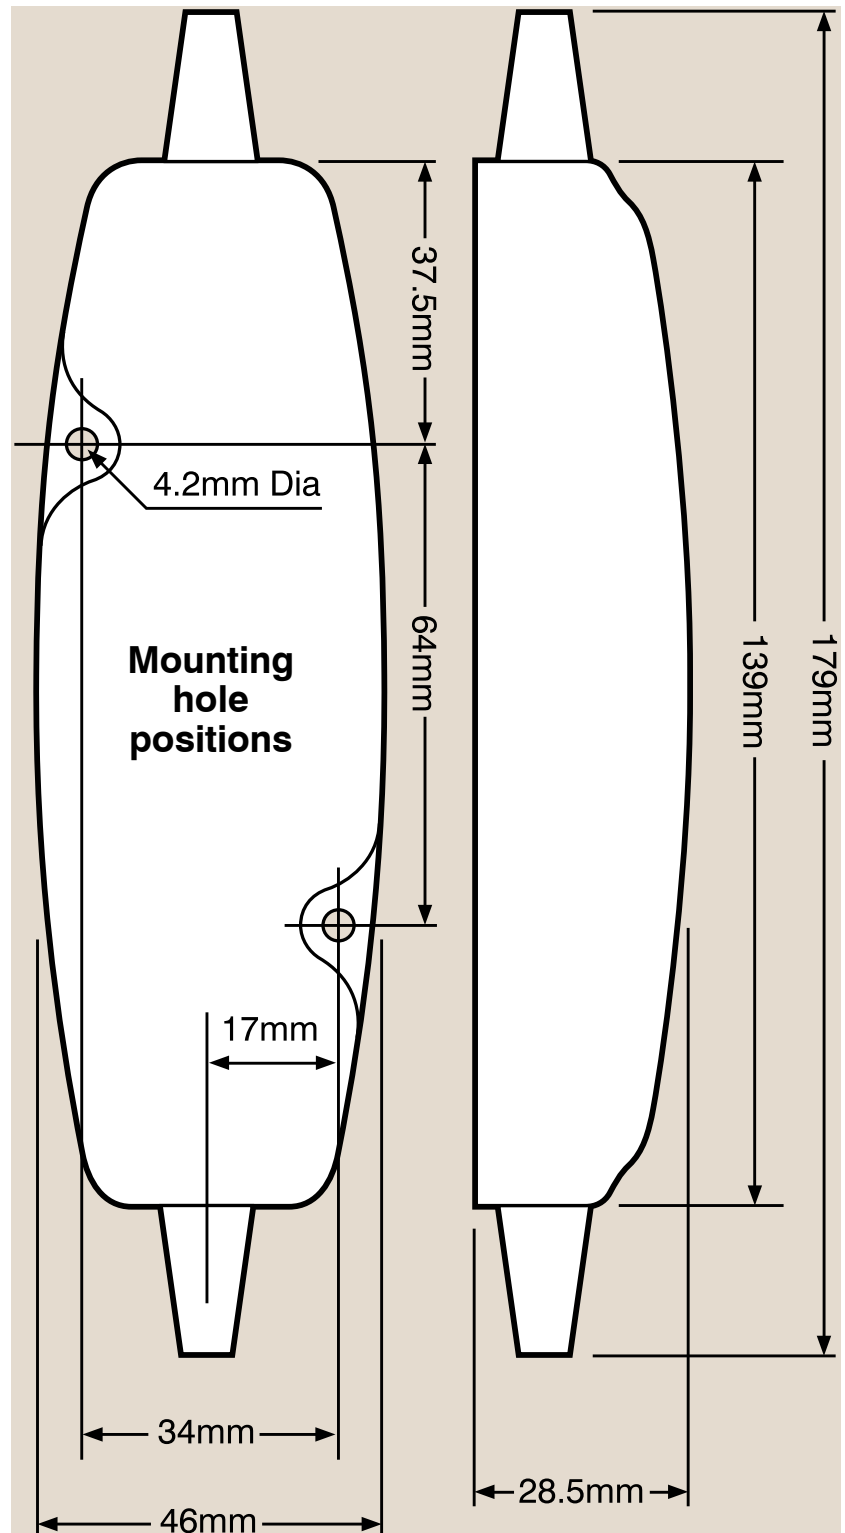

Active Research Limited  
 Unit 5, Wessex Trade Centre  
 Ringwood Road, Poole  
 Dorset UK BH12 3PF

t: +44 (0)1202 746682  
 f: +44 (0)1202 746683  
 e: sales@actisense.com  
[www.actisense.com](http://www.actisense.com)